

FLEX Manager layout



- 1 Instructions
- 2 Diagnostics: hover your mouse over these objects for more info
- 3 Activate button: activate your chip
- 4 Battery status: see how much you have left on your battery charge
- 5 Notifications: change how MYLAPS will send you notifications when your subscription is about to expire
- 6 LED: lifetime and subscription indicator

Quick Start Guide also available in other Languages:



Available on flex.mylaps.com

QUICK START GUIDE

Steps to activate your ProChip FLEX
using FLEX Manager

STEP 1:

Download the software from: <http://flex.mylaps.com>

STEP 2:

Install the software.

The software installs the ProChip FLEX Manager and the necessary USB drivers.

STEP 3:

Start the ProChip FLEX Manager.

The software will automatically try to find the connected ProChip FLEX.

FINAL STEP:

Activate your ProChip FLEX Transponder by pressing the ACTIVATE button in the software.



LED indication ProChip FLEX

Subscription status and battery status check

- Shake the chip for around 10 seconds
- Hold the chip idle for around 5 seconds
- Chip will give you 2 blinks:
 - o First blink: Subscription
 - Y Green: Subscription OK
 - Y Red: Subscription expired
 - o Second blink: Battery
 - Y Green: Battery ok
 - Y Red: Battery low

For more information go to flex.mylaps.com