


FLEX Manager layout

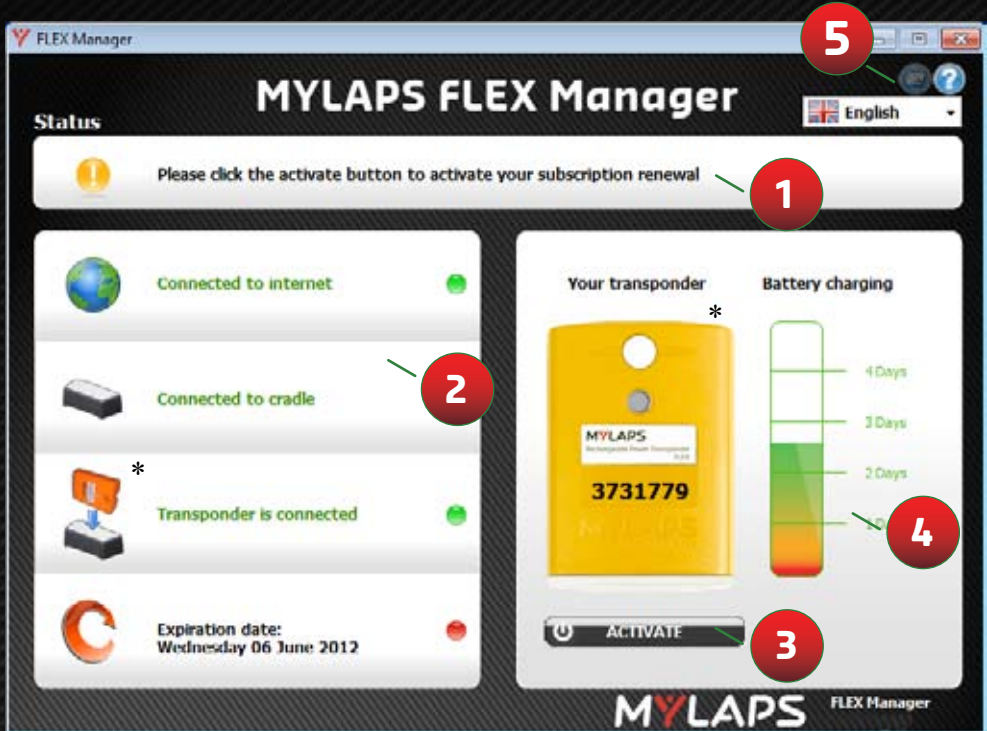

* Transponder color in image may not correspond to your MYLAPS FLEX transponder

- 1 **Instructions**
- 2 **Diagnostics: hover your mouse over these objects for more information**
- 3 **Activate button: activate your transponder**
- 4 **Battery status: see how much you have left on your battery charge**
- 5 **Notifications: change how MYLAPS will send you notifications when your subscription is about to expire.**

Quick Start Guide also available in other Languages:



Available on <http://flex.mylaps.com>

Quick Start Guide

Steps to activate your transponder
using FLEX Manager

Step 1:

Download the software from:
<http://flex.mylaps.com>

Step 2:

Install the software.
The software installs the FLEX Manager and the driver for the cradle.

Step 3:

Start the FLEX Manager.
The FLEX Manager will automatically try to find a connected cradle.

Step 4:

Connect the cradle to the computer.

Final Step:

Activate your FLEX transponder by inserting it in the cradle and pressing the 'Activate' button in FLEX Manager.