


ProChip FLEX

1 Activate

Before you are able to use your ProChip FLEX, you will have to do a one-time activation. Plug the ProChip FLEX into your computer by using the USB connection. Download the free ProChip FLEX Manager software at flex.mylaps.com and follow the instructions from the inside of this manual.

Now, it is easy to check your ProChip's battery status, see how long your current subscription lasts and renew your subscription by plugging your ProChip FLEX into your computer's USB port.

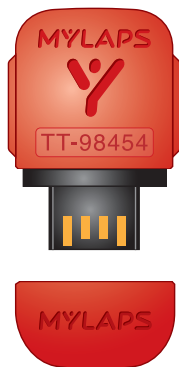

2 Register

Register your ProChip FLEX to your free online account at mylaps.com to view, analyze and share all your practice and race results online. If the track has a MYLAPS system installed which is online, your results will automatically become visible in your account.

3 Mounting

The ProChip FLEX can be used with the provided ankle straps, or with the MYLAPS ProChip FLEX bicycle holder, which is available in our web shop at mylaps.com.

4 Subscription

Your ProChip FLEX comes with a subscription that is valid for 1, 2 or 5 years. This period starts as soon as you activate your chip with ProChip Flex Manager. It can be extended with another 1, 2 or 5 years when it has expired. Additional subscriptions can be bought at mylaps.com. With an activated subscription, your ProChip FLEX is covered by insurance and warranty.

Warning: If the chip is attached to the bicycle, please make sure it is done properly. An improperly mounted MYLAPS ProChip can be dangerous and can cause serious accidents. MYLAPS cannot be held responsible for any injuries or accidents caused by improper mounted ProChips. Please verify the correct chip mounting position for every race with the organization.

Also available in other languages on mylaps.com/prochipflex/manual



mylaps.com

Article number 10R125

MYLAPS
SPORTS TIMING

NEW! ProChip FLEX



*Timing chip
for race
and training
results*

Online and onsite




mylaps.com



MYLAPS
SPORTS TIMING

ProChip FLEX Manager layout

Available and more information on <http://flex.mylaps.com>

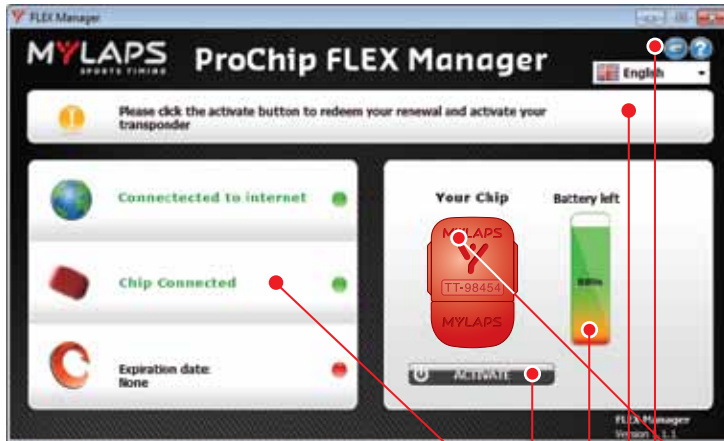

Instructions

Diagnostics: hover your mouse over these objects for more info

Activate button: activate your chip

Battery status: see how much you have left on your battery charge

Notifications: change how MYLAPS will send you notifications when your subscription is about to expire.

On the ProChip; LED for USB connection, battery status and subscription indication

NOTE: The ProChip Flex transponder is compatible with USB 2.0 Full Speed

How to activate your ProChip FLEX using FLEX Manager

STEP 1

Connect the ProChip FLEX via USB to your computer. Download the software from: <http://flex.mylaps.com>

STEP 2

Install the software. The software installs the ProChip FLEX Manager and the necessary USB drivers.

STEP 3

Start the ProChip FLEX Manager. The software will automatically try to find the connected ProChip FLEX.

FINAL STEP

Activate your ProChip FLEX Transponder by pressing the **Activate button** in the software.

LED indication ProChip FLEX



- Subscription status and battery status check
- Shake the chip for around 10 seconds
- Place the ProChip Flex on a completely stationary surface for 10 seconds
- Chip will give you 2 blinks:
 - First blink:** Subscription
 - Green: Subscription OK
 - Red: Subscription expired
 - Second blink:** battery status
 - Green: Battery OK
 - Red: Battery low